



# Escali P115M Battery Replacement

This guide explains how to replace low or faulty batteries for the Escali P115M kitchen scale.

Written By: Megan Herrel



## INTRODUCTION


The Escali P115M should show a low battery symbol on the display if the battery is running low.

## Step 1 — Battery



- Flip the device over.

## Step 2

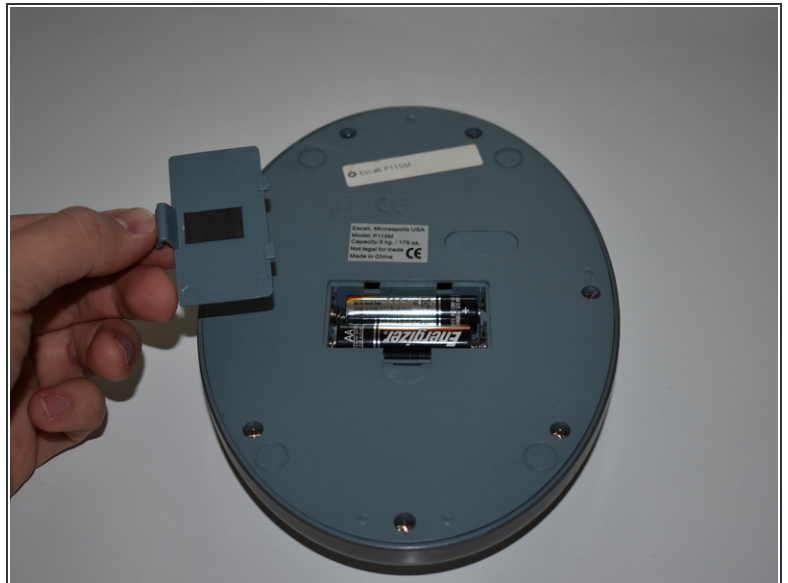

- Remove the battery cover.

## Step 3



- Use the plastic tab to pry the battery cover off to get the batteries up and out of the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-30 05:14:44 AM.